# SOLOS

### SOLOS Tempered Glass Standing Desk SKU: SD-SStandG

## **Operation Instruction**

### Control Pad

Key button

LED Screen (123 (2) (3) (4)

- 1. Long press the up/down buttons to adjust the height of the desk; The screen will show "bot" when the desktop runs to its lowest point; and it will show "top" when the desktop runs to its highest point.
- 2. key button: 1,2,3,4 are the four height memory keys, long press the button about 3s can record the current height;
- 3. Press the 3 and 4 keys at the same time, the RST reset indication will appear. Continue to press the "▼" down key until the lifting table lowers to the lowest position and rebounds to rise to a stop. The display shows the lowest height "bot", release "▼" down key, the reset is over and the table can be used normally.
- 4. The desk has two USB, one type-C ports, they can supply power to other electronics. Every channel can maximum output DC 5V/2.4A power when the desktop is stationary and will stop output when the desktop is running. It will resume output after 5s of inactivity.
- 5. Short press the "LOCK" button to achieve the child lock function, so as to avoid accidentally touch and guarantee the safety of children; The key lock and unlock is switchable, screen will show "Loc" when the desk is locked.
- 6. Long press the "LOCK" button about 5 seconds, the display unit switches between metric and imperial.
- 7. Sensitivity switch, long press the up key + the down key, the buzzer will sound once the switch is successful, the digital tube will display "A-0" to switch off when it is anti-collisionr, and the digital tube will display "A-1" to switch back to the sensitivity level 1. The nixie tube displays "A-2" when it encounters resistance and returns to sensitivity level 2. The nixie tube displays "A-3" when it encounters resistance and returns to sensitivity level 3. The sensitivity level is 3 when it is most sensitive.
- Troubleshooting:
  - a. Reset: When the LED shows"#5€", press "▼" button until the desk reaches its lowest height and rebounds to stop, it means the reset has been finished.
  - b. When it does't work and the LED shows "E01" or "E02", please retry 18 mins later.
  - c. If the " $\blacktriangledown$ " button does't work, please check the cable connection and then cut off the power for at least 10 seconds. Reconnect to the power and press " $\blacktriangledown$ " button to start the reset process when it shows the " $\Re \S \Gamma$ ".
  - d. If all these above process are inefficient, plz contact our customer service.

#### Common fault treatment

The following tips will help you detected and eliminate the common fault and error. If the fault you met is not listed below, please contact with your supplier. Only themanufacturer and professionals are capable for investigating and correcting those fault and error.

Fault phenomenon	Method
No response while long pressing down arrow after connected with a power supply	1.Check if all the cables be connected well
	2.Contact your supplier or dealer
No response while pressing up arrow/ down arrow after connected with a power supply	1.Check if all the cables be connected well
	2.Contact your supplier or dealer
Rising in a low speed	Check if overloaded, max loading:110lbs;
	2. Contact your supplier or dealer
The motor not move as instructed	1. Contact your supplier or dealer
Go down but not go up	1.Reposition
	2.Contact your supplier or dealer
Downward sliding	Check if overloaded, max loading: 110lbs;
	2. Contact your supplier or dealer
Frequently Reposition	1. Check if overloaded, max loading: 110lbs;
	2. Contact your supplier or dealer
Overwork (Duty cycle: Max 2min on/18min OFF)	Restart after suspend for 18mins while connecting with power;
	2. Contact your supplier or dealer;



- 1. Power supply: AC100V-240V,50/60Hz
- 2. Service Environment: 0-40°C
- 3. Unplug the power plug before cleaning, wipe the dust on surface with slight wet dishcloth when cleaning, be careful not to let the drops into the internal parts, not loose the connector.
- 4. The electric box contains electronic components, metals, plastics, wires etc., so dispose of it in accordance with each country's environmental legislation, not the general household waste.
- 5. Check carefully to ensure correct and complete assembly before using.
- 6. Be familiar with all functions and program settings of the product before first use.
- 7. Children are forbidden to play on the product because of unforeseen action when playing, so any dangerous consequences caused by this improper action will not be on 8. Slight noise caused by the V-ribbed belt or brake system due to structure will not
- have any effect on the use of the equipment.

  9. Corrosive or abrasive materials are forbidden to clean the equipment. Must ensure that the cleaner used will not pollute the environment.
- 10. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
- 11. Cleaning and user maintenance shall not be made by children without supervision.
  12. If the supply cord is damaged, it must be replaced by the manufacturer, its service
- agent or a similarly qualified person in order to avoid a hazard.

  13. Please make sure there is no hazard sources in your operating environment. e.g., do not litter the tools around. Always be careful to treat the packaging materials in order to avoid any possible danger, e.g. plastic bag may lead to choking hazard to children.

  14. Keep the original package of the equipment if necessary in case of the future use in transportation.

Waste disposal



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.