FEATURES



1. Head rest angle adjustment



3.Push inward or outward to lock or unlock the seat



2. Head rest height adjustment



4. Push up and down to adjust seat height

Backrest Intergrated

web:www.solso-it.com

SOLOS ERGONOMIC MECHANISM



Neckguard

Function Adjustment Instruction

Picture 1: Adjust the rotation angle of the head rest, to better support your head position.

Picture 2: Adjust up and down the head rest, to better fit personal head position

Picture 3: Lock the seat which fits your most comfortable position

Picture 4: Adjust the height in order to meet different preference

Your professional office IT supplier

email:sales@solos-it.com