

SOLOS Kids Standing Desk Controller Manual

SKU: SD-KStand

How to use handswitch

Key button

Up button

LED screen

SOLOS

Down button

| | | |
|---|-----|--|
| ● | “▲” | Up button, adjust the desk upwards |
| ● | “▼” | Down button, adjust the desk downwards |

Operation Instruction

Height adjustable function:

- Key button control:
Configure two key buttons "▲" and "▼" to control the control box;
- LED display function:
1)In adjustable mode: display the current height of the desktop in real time. After the desktop is stationary, keep the desktop height displayed for 3 seconds, and then switch to display the current height of the child for 3 seconds;
2)In child lock mode: press any button in the child lock state, the LED displays LOC, and the table does not move;
3)In protection mode: refer to the above section "Safety protection function" for display
- Child lock function:
Press and hold "▲" and "▼" at the same time for more than 3 seconds to open/close the child lock; When the current desk status is in "no child lock" state, press and hold the key buttons for 3 seconds, it will be "child lock state" state, and the display shows "LOC"; When the current desk status is in "child lock" status, press and hold the key buttons for 3 seconds, it will be in "no child lock" status, and the display shows "UNL".

● Troubleshooting:

1. Reset: When the LED shows "RST", press "▼" button until the desk reaches its lowest height and rebounds to stop, it means the reset has been finished.
2. When it doesn't work and the LED shows "E01" or "E02", please retry 18 mins later.
3. If the "▼" button doesn't work, please check the cable connection and then cut off the power for at least 10 seconds. Reconnect to the power and press "▼" button to start the reset process when it shows the "RST".
4. If all these above process are inefficient, plz contact our customer service.

Common fault treatment

The following tips will help you detected and eliminate the common fault and error. If the fault you met is not listed below, please contact with your supplier. Only the manufacturer and professionals are capable for investigating and correcting those fault and error.

| Fault phenomenon | Method |
|---|--|
| No response while pressing up arrow/ down arrow after connected with a power supply | 1. Check if all the cables be connected well |
| | 2. Contact your supplier or dealer |
| The bottom can't move up | 1. Check if overloaded, max loading: 50kg; |
| | 2. Contact your supplier or dealer |
| Overwork (Duty cycle: Max 2min on/18min OFF) | 1. Restart after suspend for 18mins while connecting with power; |
| | 2. Contact your supplier or dealer; |



Attention

1. Power supply: AC100V-240V,50/60HZ
2. Service Environment: 0-40°C
3. Unplug the power plug before cleaning, wipe the dust on surface with slight wet dishcloth when cleaning, be careful not to let the drops into the internal parts, not loose the connector.
4. The electric box contains electronic components, metals, plastics, wires etc., so dispose of it in accordance with each country's environmental legislation, not the general household waste.
5. Check carefully to ensure correct and complete assembly before using.
6. Be familiar with all functions and program settings of the product before first use.
7. Children are forbidden to play on the product because of unforeseen action when playing, so any dangerous consequences caused by this improper action will not be on manufacturers.
8. Slight noise caused by the V-ribbed belt or brake system due to structure will not have any effect on the use of the equipment.
9. Corrosive or abrasive materials are forbidden to clean the equipment. Must ensure that the cleaner used will not pollute the environment.
10. Please make sure there is no hazard sources in your operating environment. e.g., do not litter the tools around. Always be careful to treat the packaging materials in order to avoid any possible danger, e.g. plastic bag may lead to choking hazard to children.
11. Keep the original package of the equipment if necessary in case of the future use in transportation.

Waste disposal



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.