

# SOLOS Acoustic Panel Instructions


SKU: SO-AP5323

# SOLOS


## Parts List



Panel 1PC

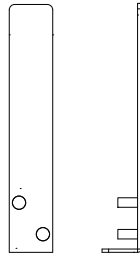


Support Bracket 2PCS



Clamp Bracket 2PCS





M6 Countersunk Head Screw 2PCS



## Installation


Line up the pegs on the Support Bracket with the pre-cut holes on your Acoustic Panel (you should be able to see them near the bottom of the panel). Push the pegs inside the Acoustic Panel so they are fully attached to each other.

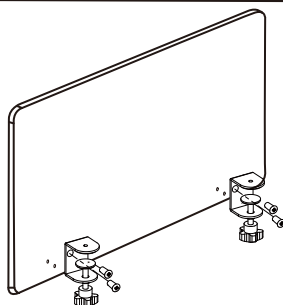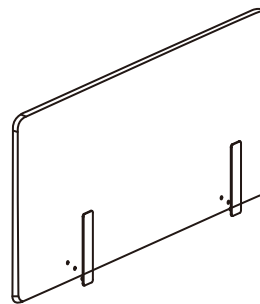

### Step 2

Line the Clamp Bracket up with the holes on the other side of the panel. Insert the Head Screws and tighten them.

Loosen the Clamps so the opening can allow the Acoustic Panel to fit onto the desk. (please be noted that the maximum thickness of the desk is 1.5 inches )

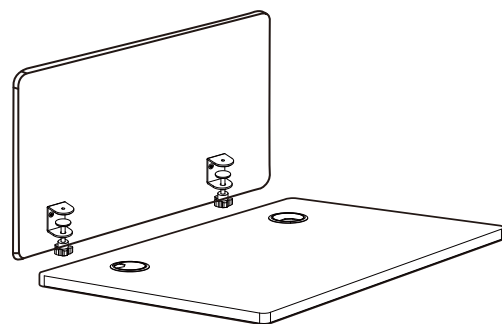

### Step 4

Once being attached to the desk, tighten the Clamps on the back of your desk.

