



Step 1: Insert and push the casters into the bottom of the chair starbase, then vertically insert the pneumatic bar into the center of the chair starbase.

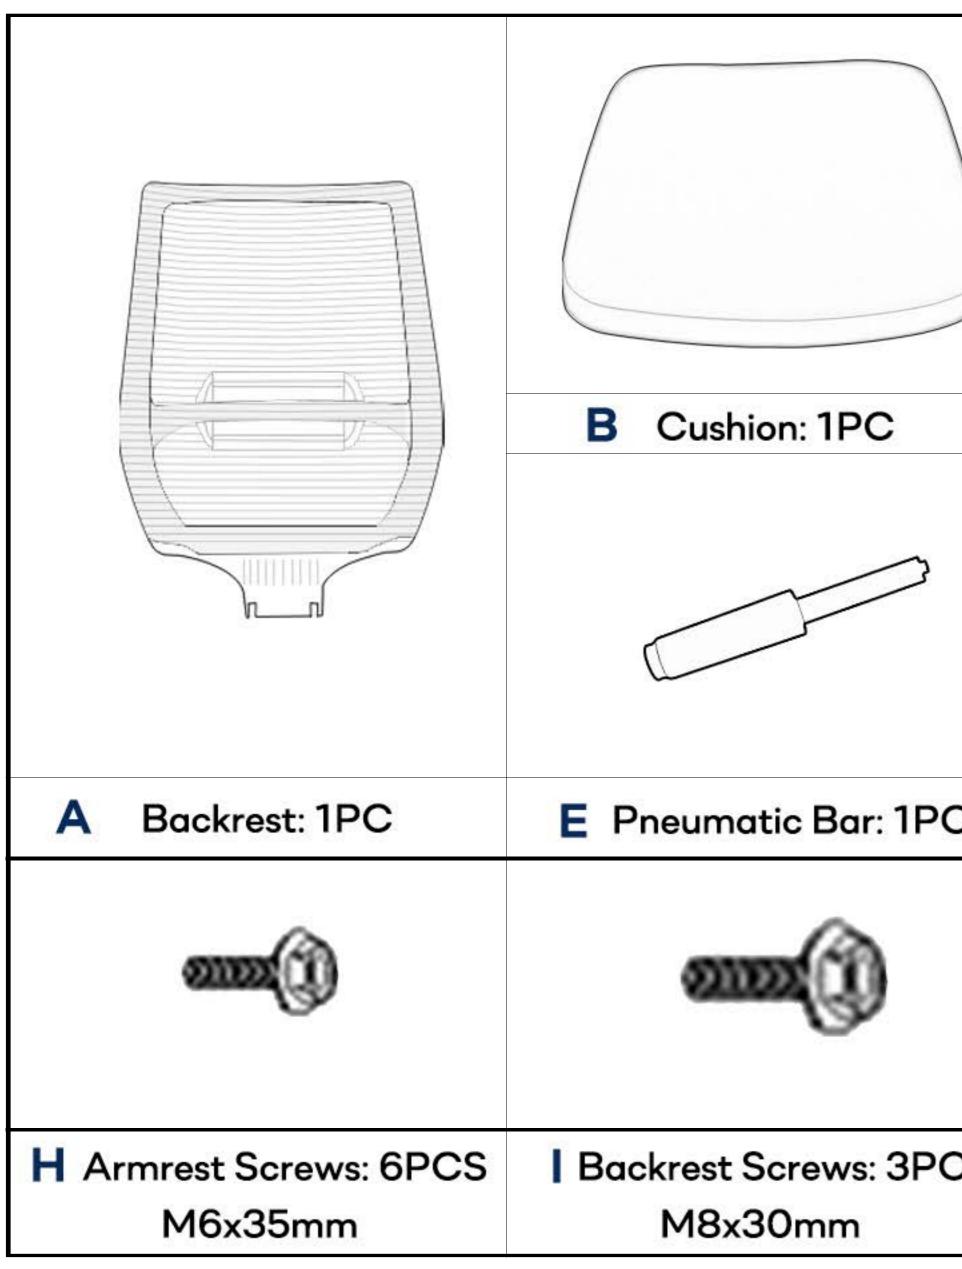



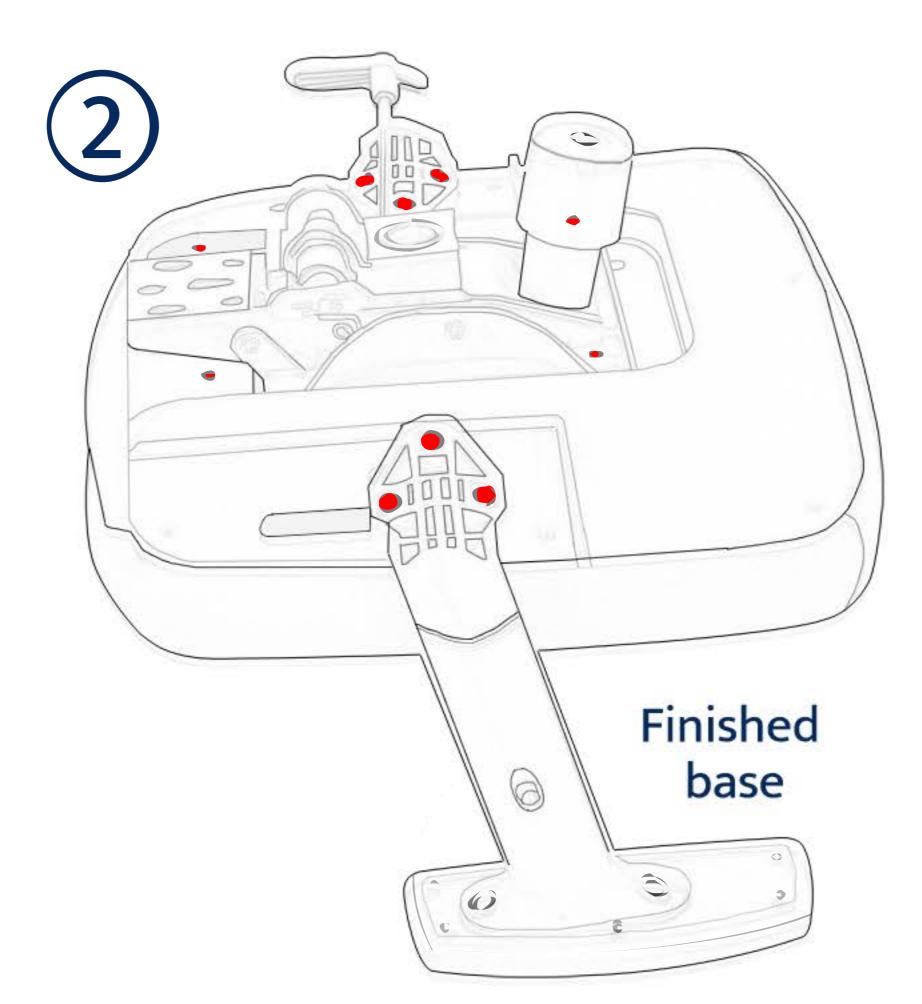


Step 2: Upside down the cushion as shown in the image, assembly two armrests on the side with six M6x35 mm screws. And assembly the chassis in the center of the chassis, with four M6x25mm screws. You may use the Allen key to secure the screws.

C Armrest: 2PCS D Chair Base: 1P	С
C F Chassis: 1PC G Casters: 5PC	
CS J Chassis Screws: 4PCS K Allen Key: 1PC for	each
M6x25mm M4&M5	

Your professional office IT supplier

Instruction Manual

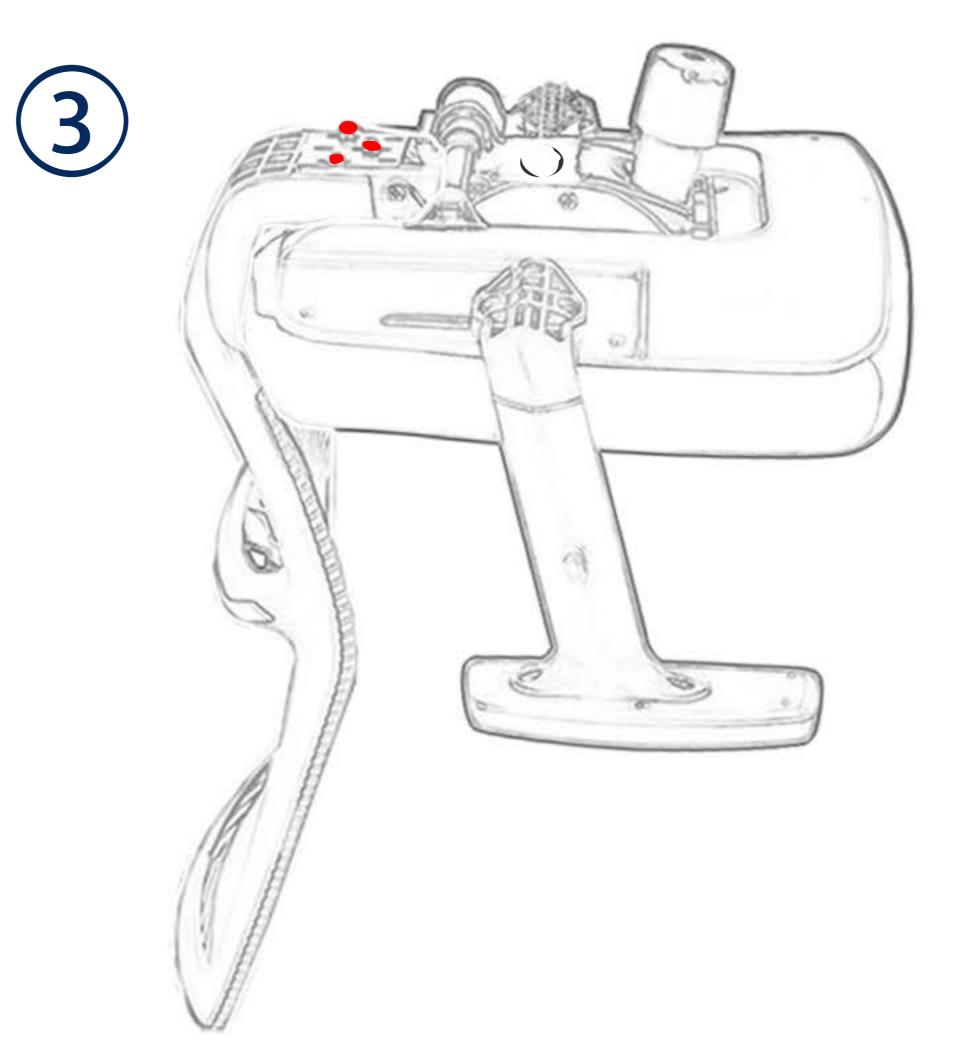

Step 4: Vertically place the integrated Step 3: Insert the backrest into the chassis over the starbase, making sure chassis, and use three M8x30mm the pneumatic bar firmly inserts into screws to fix the connection between the hole of the chassis. the backrest and the chassis.

Please read the Safety Instructions below carefully

- 1. Do not overload this chair. Each chair can only bear one person's weight at maximum.
- 2. Please use it on a flat surface.
- 3. Children under 5 years old should NOT use the chair.
- 4. Please do not sit on the chair arm.
- 5. Please do not stand on a chair or use it as a ladder/ trolley.
- 6. Please do not use sharp things to scrape it or place it close to fire.
- 7. Please do not put your fingers in between the chair while using it.

SOIOS



